



PIX-LINK WIFI REPEATER/ROUTER/AP MODEL LVWR09Q

Pix-Link LV-WR09 300Mbps Range WiFi Extender Repeater Mini Router

[Read More](#)

SKU: 40048

Price:

Categories: [Signal Extenders](#)

Product Description



**PIX-LINK W
REPEATER F
EXTENDER /
WR03**

**PIX-LINK
300Mbps
Repeater**

- Boosting existing network to hard-to reach and long distance area,with this wifi booster,it can easily extend your wifi coverage,say goodbye to WiFi dead zones.
- Extend WiFi Speed Up to 300Mbps ,offering stable and available WiFi signal in weak wireless area,no trouble in watching movies,listening music ,play online games, etc.
- Combined wired/wireless connection,This wireless repeater with Lan port,which not only support wireless repeater connection but also wired LAN connection.
- Compatible with any wireless network devices that comply with the agreement of 802.11n/g/b,including Desktop,PC,Tablet,Laptop,Smart TC,smartphone,iPhone,iPad,etc
- Easy to Install and Set:Plug this easily and setup follow the picture instruction. Simply pressing WPS button to get safe encryption

Function:

1. Extend your wifi signal throughout your whole house,
2. Eliminate dead zone, wifi signal in dead area such as Kitchen, Bathroom ect
3. Cellpphone signal boost 100% , stream music video game at ease
4. Repeater : Extend wifi range to make you receive wifi signal anywhere around house
5. AP Mode: Access Point Mode creates a wireless network for the other Wi-Fi devices

Quick Setup

1. Plug this unit into a power socket. Wait until see green led steady blink

2. On your phone/tablet/laptop connect to wireless network which name is "Wifi Repeater" (NOT your existing Wifi)
3. Open your browser and go to 192.168.10.1
4. Log in. Username and password are both "admin"
5. Click on "Repeater" (under Wizard)
6. Select your existing Wifi network and click "Apply"
7. Change the Repeater SSID(name) and Security key to EXACTLY match the SSID and password of your Wifi network. Click "Apply".
8. Reset tips: Stick/Press the reset button for nearly 10s or more until you see the green LED blink steady

Note:

- Please connect the wifi "WiFi Repeater" on your computer/phone wireless list before you log in the website "192.168.10.1" to configure.
- If you set the device as a repeater, please enter your original home wifi password and it is recommended to rename the SSID.
- If you want to reconfigure this device, please reset it first: Press the reset button over 10s till only the red power light on and green WPS light on and then WLAN light blinks.

Specifications:

- Frequency Band: 2.4 GHz
- Supported Voltage: 110V-240V
- Maximum WLAN security with WPA2, WPA and WEP(128/64)

[Read More](#)

SKU: 40048-1

Price:

Categories: [Signal Extenders](#)

Product Description

PIX-LINK LV-WR03 300Mbps Wireless-N Repeater/AP
